

Technical Data: IP65 63A 2 Pole Changeover Switch | LBC632PBB



Important Safety Notice

It is the responsibility of the person installing the electrical equipment to ensure that the installation meets the requirements of the IET wiring regulations and is therefore 'fit for purpose'. Factors such as correct selection of components, cable sizing, protective devices and Earth bonding are all critical and should be checked prior to full testing and power-up. Any other regulations applicable to the equipment being installed such as the Machinery Directive and current health and safety legislation must also be adhered to.

All connections (including factory made) must be checked for the correct tightness prior to commissioning of the electrical installation.

All connections should be checked periodically to ensure correct tightness.

DO NOT USE POWER TOOLS ON THESE PRODUCTS



16	ecn	nic	cai	Ia	ומו	е


Product Standard	IEC & EN 60947-3		
Ingress Protection	IP65		
Enclosure Material	Polycarbonate (PC)		
Rated Insulation Voltage (Ui)	690V		
Rated Impulse withstand Voltage (Uimp)	6kV		
Rated Operational Current (Ie)	63A		
Rated Frequency	50/60Hz		
Maximum Backup Fuse (gL)	63A		
Utilisation Category	AC22-A		
Operating Temperature*	-5 to + 40°C		
Pollution Degree	3		
Altitude	Not exceeding 2000 metres		
Tunnel Terminal Capacity	16mm²		
Tunnel Terminal Torque	2.0Nm		
M6 Lug Terminal Capacity	16mm²		
M6 Lug Terminal Torque	2.0Nm		

^{*}average temperature not exceeding 35°C over a 24 hour period


Internal Image




Wiring Diagram

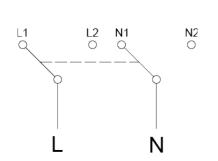

Switch shown in position '1'

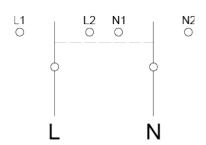

Switch shown in position '0'

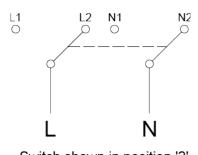


Switch shown in position '2'

Page 1 of 2 **EDS**1267-002



Technical Data: IP65 63A 2 Pole Changeover Switch | LBC632PBB

Dimensions

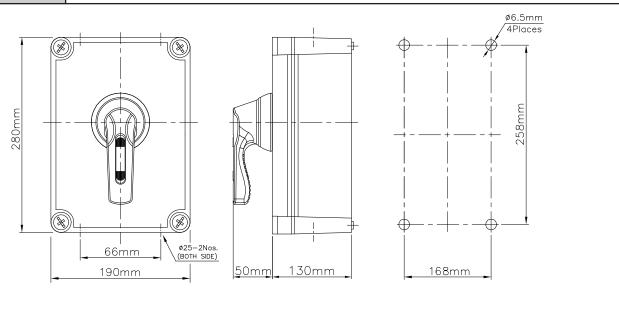

Handle Defeat Mechanism

The isolator can be opened by authorised personnel with the switch in the on position for testing purpose.

- 1. Remove the securing screws from the enclosure lid
- 2. Insert a small screwdriver into the handle defeat mechanism aperture
- 3. Lift off the enclosure lid
- 4. To refit the lid, keep the handle in the ON Position and the defeat mechanism depressed.

WARNING: Live parts inside, defeat mechanism ONLY for authorised personnel

